



Kodak EasyShare Z1015 IS Battery Replacement

This guide provides a step by step guide on removing the battery from the Kodak EasyShare Z1015 IS.

Written By: Jack



Step 1 — Battery



- Begin by sliding the switch towards the open symbol. Release your finger from the switch and the battery case will pop open.

Step 2



- Next, press down on the red lever which holds the battery in place.

Step 3



- Once the battery has popped out of the compartment, simply pull it out of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:44:30 PM.